INSTALLATION INSTRUCTION

AT EC LB CP 300 S22 WIFI
AT EC LB CP 500 S22 WIFI
AT EC LB CP 1000 S22 WIFI



Outer ventilation hood

PURPOSE

The outer ventilation hood (hereinafter referred to as the "hood") is designed to prevent ingress of water and foreign objects into the ventilation equipment from outside.

THE UNIT MAY NOT BE OPERATED BY CHILDREN OR PERSONS WITH REDUCED PHYSICAL, MENTAL OR SENSORY CAPACITIES, OR LACKING THE APPROPRIATE TRAINING.


THE CHOICE OF UNIT INSTALLATION LOCATION MUST PREVENT UNAUTHORIZED ACCESS BY UNATTENDED CHILDREN.

DELIVERY SET


	300/500	1000
Hood	1	2
Installation instruction	1	1
Fastening kit	1	1
Packing box	1	1

OVERALL DIMENSIONS

300/500

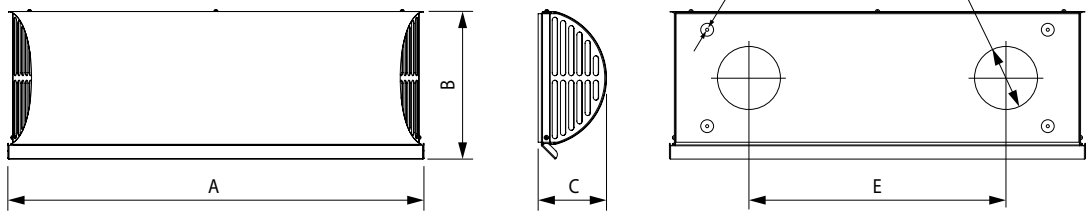

1000

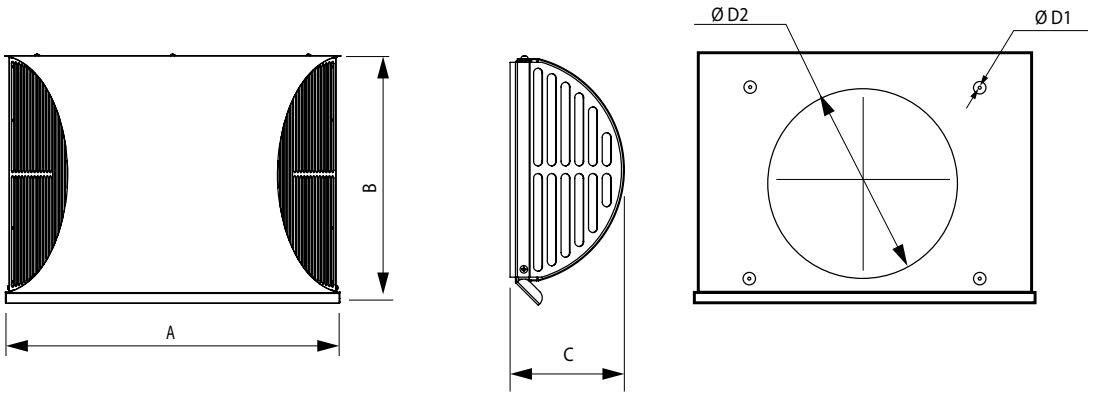


	A	B	C	E	D1	D2
300	648	370	175	230	6	200
500	748	480	230	290	6	250
1000	717	530	250	—	6	402

INSTALLATION


WARNING! IF THE MOUNTING PLACE IS LOCATED AT HIGH ALTITUDE, PLEASE REFER TO A MOUNTING COMPANY POSSESSING APPROPRIATE MOUNTING EQUIPMENT!

Installation is shown on the example of the 300 ventilation hood.
For type 1000 units, two hoods must be installed.


Route the air ducts outside of the outer wall on which the hood will be installed.
Cut the excess of the air ducts.

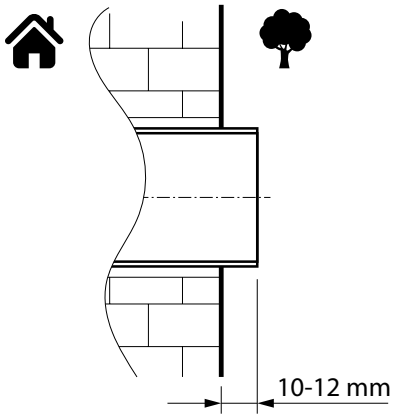


Disassemble the hood to enable access to the fastening holes. Remove the screws that secure the front part of the hood and remove it.

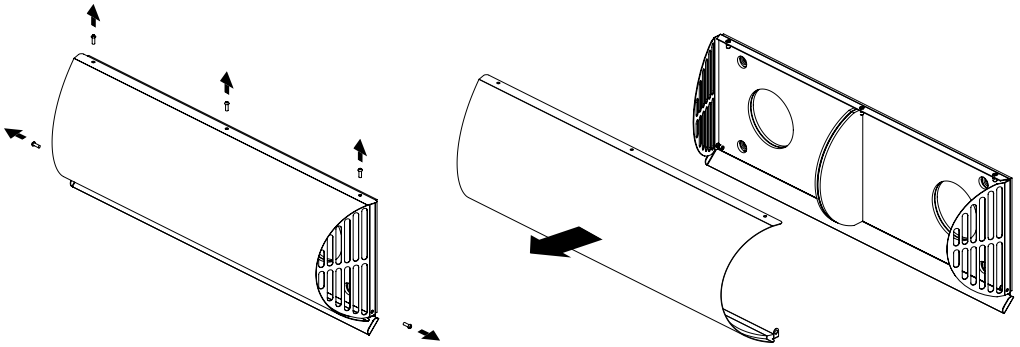

Mark the holes using the back part of the ventilation hood. Drill 4 holes for the dowels.

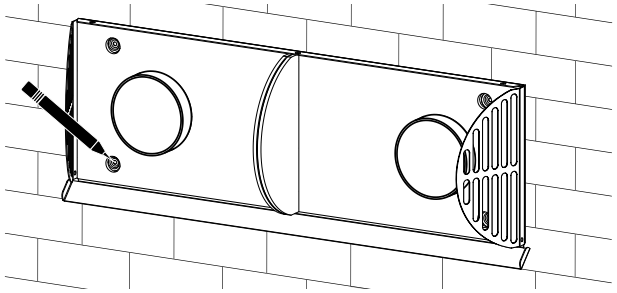

Fix the back part of the hood to the wall.

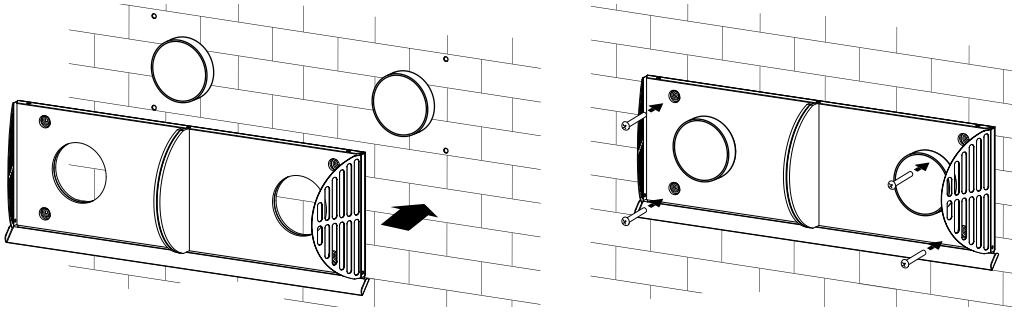

Install the front part of the hood and fix it with screws.

